

Help is three presses away.

Wear the wristband while at the resort. If you need urgent help, use the red SOS button.



IN AN EMERGENCY

Press the SOS button 3 times quickly

PRESS · PRESS · PRESS

Know the lights



SOS is being sent

Red flashing continuously



Help is on the way

Green flashing continuously



Wristband is working

One green flash every 10 seconds



Battery is low

One red flash every 10 seconds — tell resort staff or charge it

Pressed by mistake? Press the SOS button twice to cancel the alert.